

# **TECHNICAL BROCHURE**

BCQD R3

## **FEATURES**

Voltage Relays for installer convenience

115 and 230 volt models

208 volt relay available for low voltage applications

Start Capacitors with resistors

NEMA 3R enclosure for indoor or outdoor mounting

Quick disconnect cover design will retrofit with other Q-D control boxes

Multiple knockouts

Two grounding lugs

## **AGENCY LISTINGS**



TESTED TO UL AND CSA STANDARDS BY UL.

# Quick Disconnect Control Boxes

FOR 4", 1Ø, 3-WIRE SUBMERSIBLE MOTORS



### **GOULDS ORDER NUMBERS ORDER NUMBERS**


Control Box Order Number	НР	KW	Volts	Replaces old #	May Replace FE #	Standard Circuit Breaker	Standard Fuse	Dual Element Time Delay Fuse	Enclosure Dimensions W x D x H (in)	Shipping Wt. (lbs)
CB05411	.5	.37	115	00043	280 104 49	30 A	35 A	20 A	4.8 x 2.9 x 8.4	4
CB05412	.5	.37	230	00044	280 105 49	15 A	20 A	10 A	4.8 x 2.9 x 8.4	4
CB07412	.75	.55	230	00054	280 107 49	20 A	25 A	15 A	4.8 x 2.9 x 8.4	4
CB10412	1	.75	230	00064	280 108 49	25 A	30 A	20 A	4.8 x 2.9 x 8.4	4

#### "K" REPAIR PARTS FOR QUICK DISCONNECT STYLE CONTROL BOXES\*

Goulds Control Box Order Number	НР	Volts	Capacitor Repair Part Order Number	Start Capacitor Mfd.	Capacitor Voltage	Capacitor Quantity	Start Relay Order Number
CB05411	.5	115	9K450	250-300	125		① 9K457 ② 9K566
CB05412		230	9K448	59-71		1	① 9K462 ② 9K567
CB07412	.75		9K449	86-103	250		
CB10412	1		9K447	105-126			

<sup>\*</sup> Repair parts above will work in new voltage relay control boxes as well as in control boxes shown in "Replaces Column" above.

# **First Design**

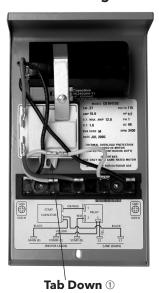

# **Current Design**




Tab Up ②

① First Design - Up to June 2009 - Relay tab on bottom, capacitor held by bracket and screw. See pictures below. 208 V use 9K461 relay.


② Current Design - Starting June 2009 - Relay tab on top and capacitors, all held by one screw. See pictures below. The relays are designed for operation in a specific orientation, therefore there are two different numbers now. 208 V use 9K568 relay.

# **INSTALLING A PumpSaver\* INSIDER**

- 1. Remove the cover from the front of the 3-wire Goulds control box.
- 2. Remove the yellow wire from the terminal strip at L2.
- 3. Remove the black wire from L1 to the capacitor.
- 4. Press the PumpSaver onto the L1 and L2 terminals.
- 5. Reconnect the yellow wire to L2 on the PumpSaver.
- 6. Connect the blue wire attached to the PumpSaver to the dual-lug terminal (with the black wire) of the capacitor.

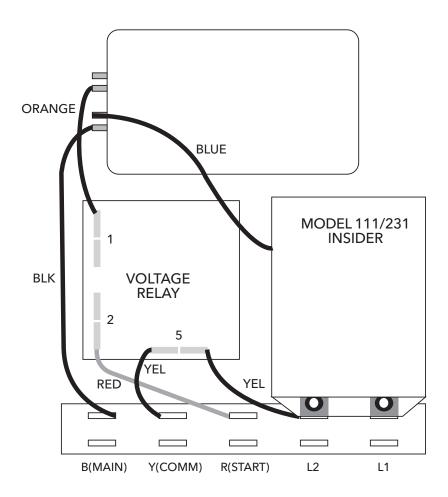

#### WIRING DIAGRAM

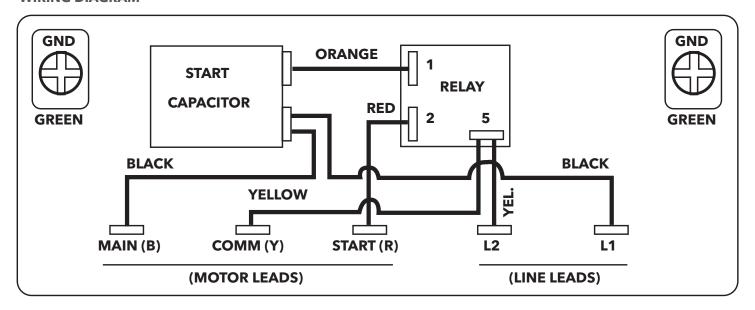



Xylem Inc.

2881 East Bayard Street Ext., Suite A

Seneca Falls, NY 13148 Phone: (866) 325-4210 Fax: (888) 322-5877 www.xylem.com/goulds

Xylem is a registered trademark of Xylem Inc. or one of its subsidiaries. Goulds is a registered trademark of ITT Manufacturing Enterprises LLC and is used under license. All other trademarks or registered trademarks are property of their respective owners. © 2023 Xylem Inc. BCQD R3 January 2023